

2013 Lincoln MKZ

2013 RESTRAINTS Supplemental Restraint System - MKZ (Except Hybrid)

Passenger Airbag Deactivation (PAD) Indicator

The **RCM** controls the **PAD** indicator through messages sent via the High Speed Controller Area Network 2 (HS2-CAN) and High Speed Controller Area Network 3 (HS3-CAN), based on information provided by the **OCS** . When the passenger airbag is activated, the **PAD** displays ON. If the **RCM** has deactivated the passenger airbag, the **PAD** indicator displays OFF.

The **RCM** briefly activates the **PAD** indicator to prove out the indicator function and verify proper functional operation of the **PAD** indicator to the front occupants.

The following table indicates the passenger airbag and **PAD** indicator status based on the size of the front passenger occupant.

Occupant Size	Passenger Safety Belt Buckle Status	Passenger Airbag Status	PAD Indicator Status
Empty	Buckled or Unbuckled	Disabled	OFF: Lit
			ON: Unlit
Small	Buckled or Unbuckled	Disabled	OFF: Lit
			ON: Unlit
Large	Buckled or Unbuckled	Enabled	OFF: Unlit
			ON: Lit