

FRONT CONTROLS INTERFACE MODULE (FCIM)

Removal


NOTE: Removal steps in this procedure may contain installation details.

WARNING: Before beginning any service procedure, refer to Safety Warnings in GENERAL INFORMATION -- MKZ . Failure to follow this instruction may result in serious personal injury.


1.

Refer to: HEALTH AND SAFETY PRECAUTIONS .


2. On both sides.

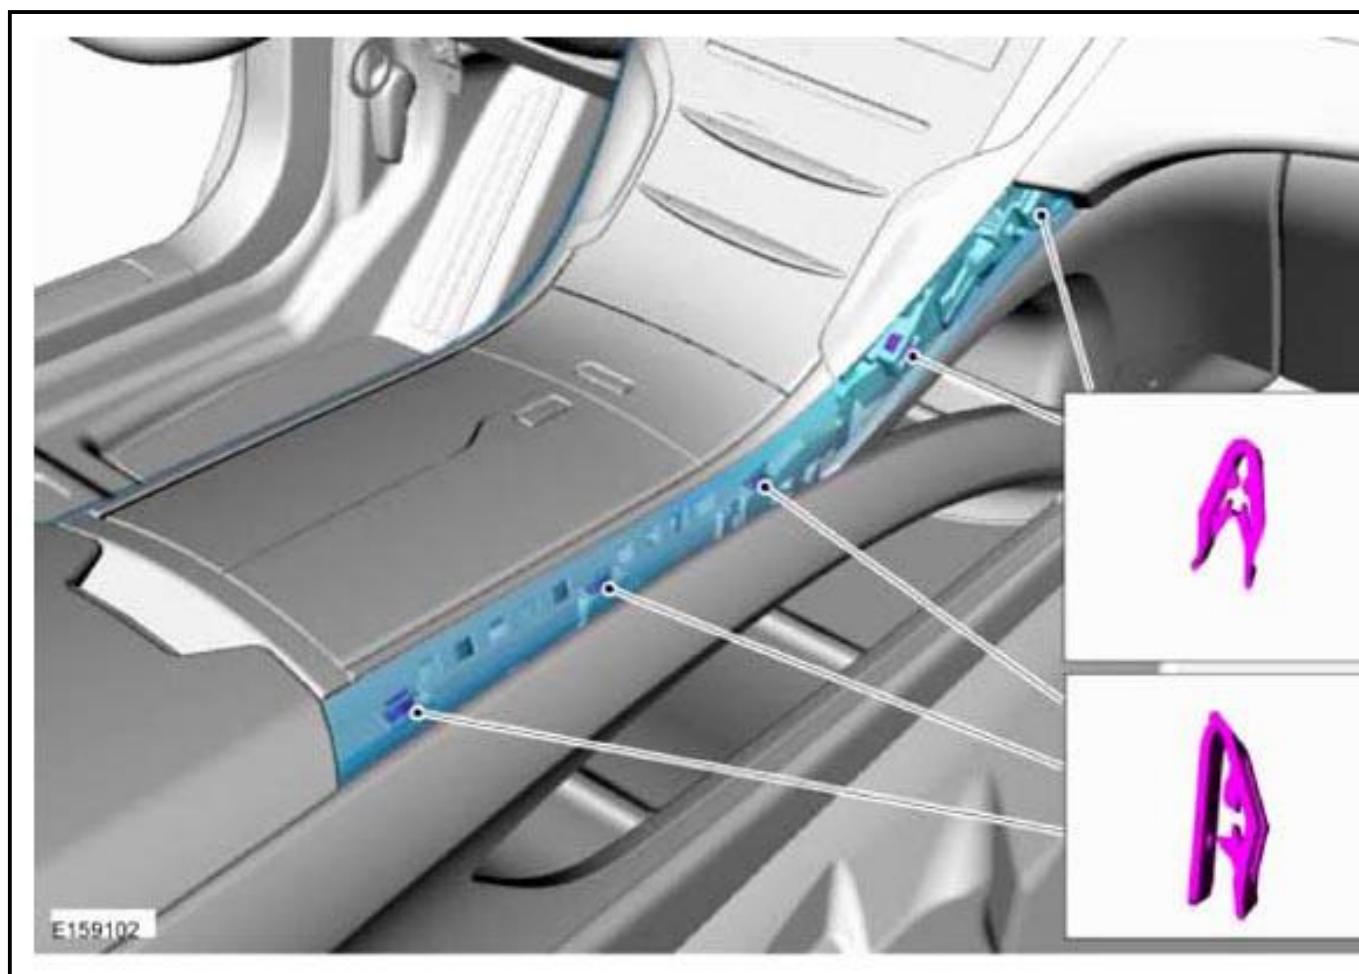


3.

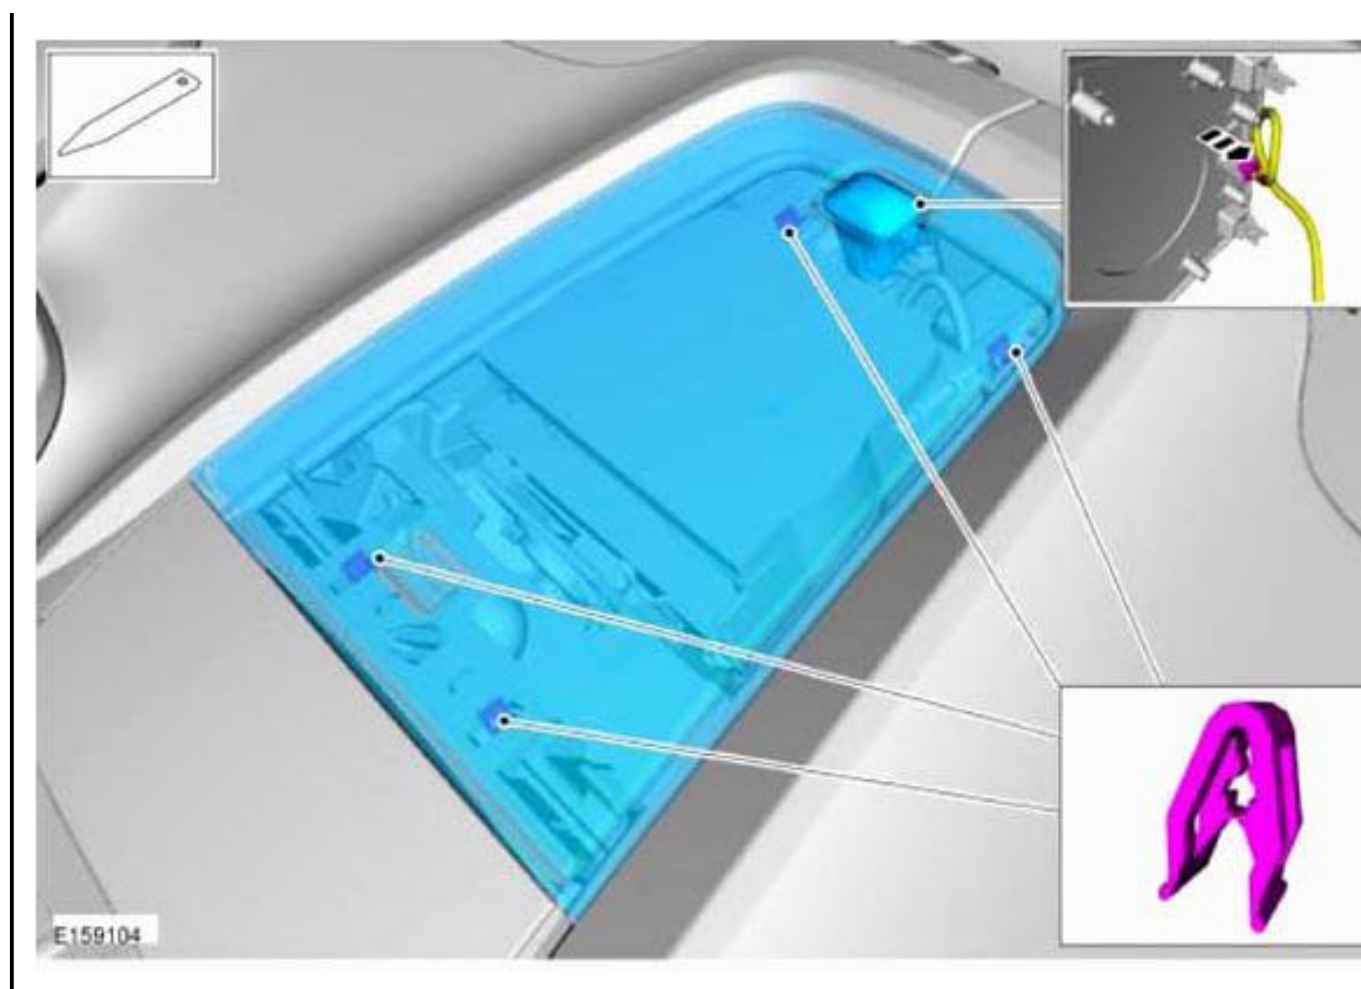

- 3.
4. On both sides.

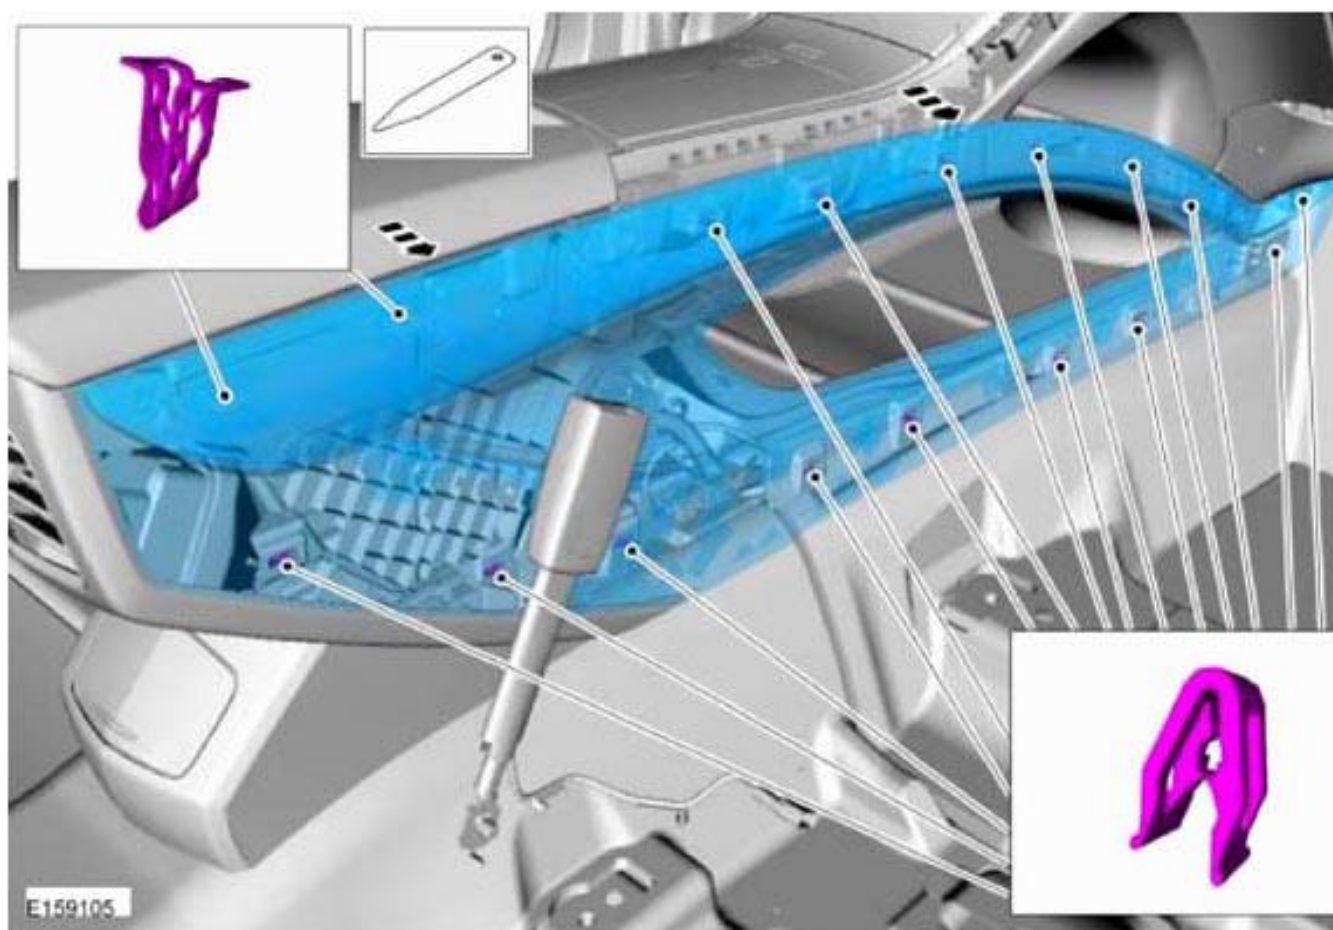


5.

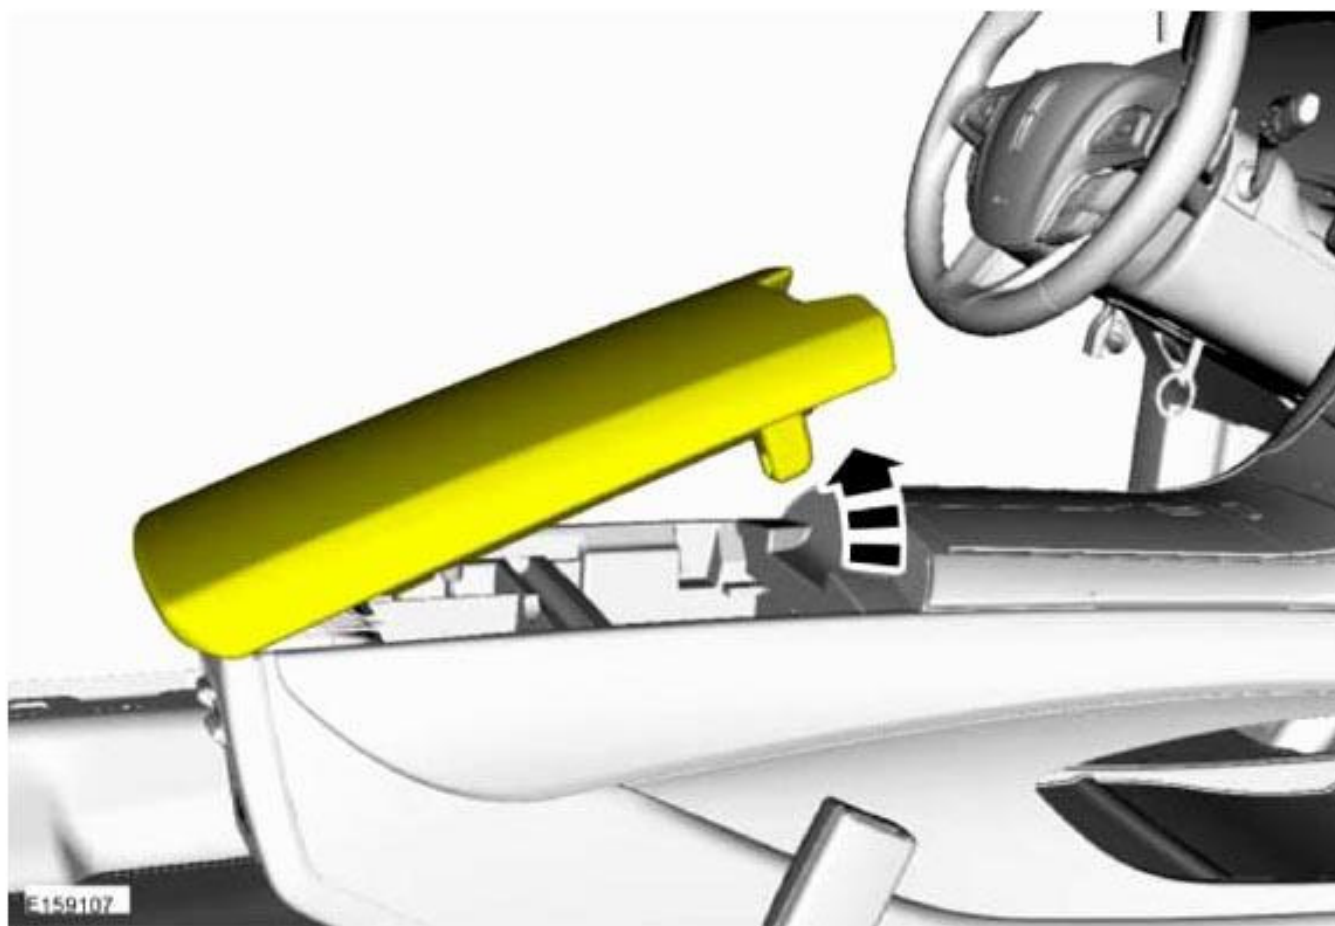


5.

6. *Torque* : 2.5 Nm

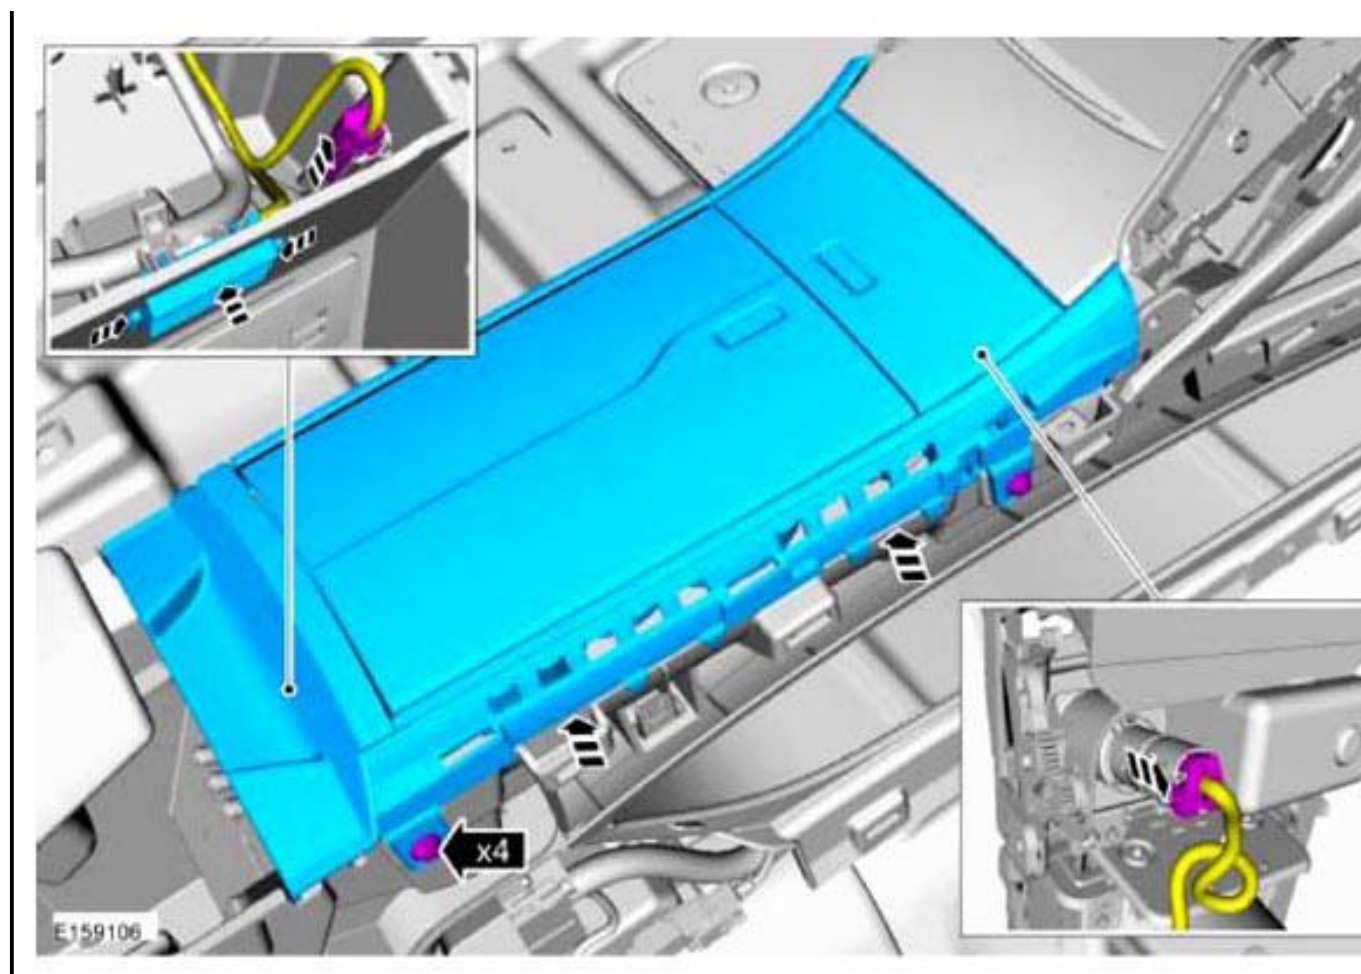

7. Torque : 2.5 Nm

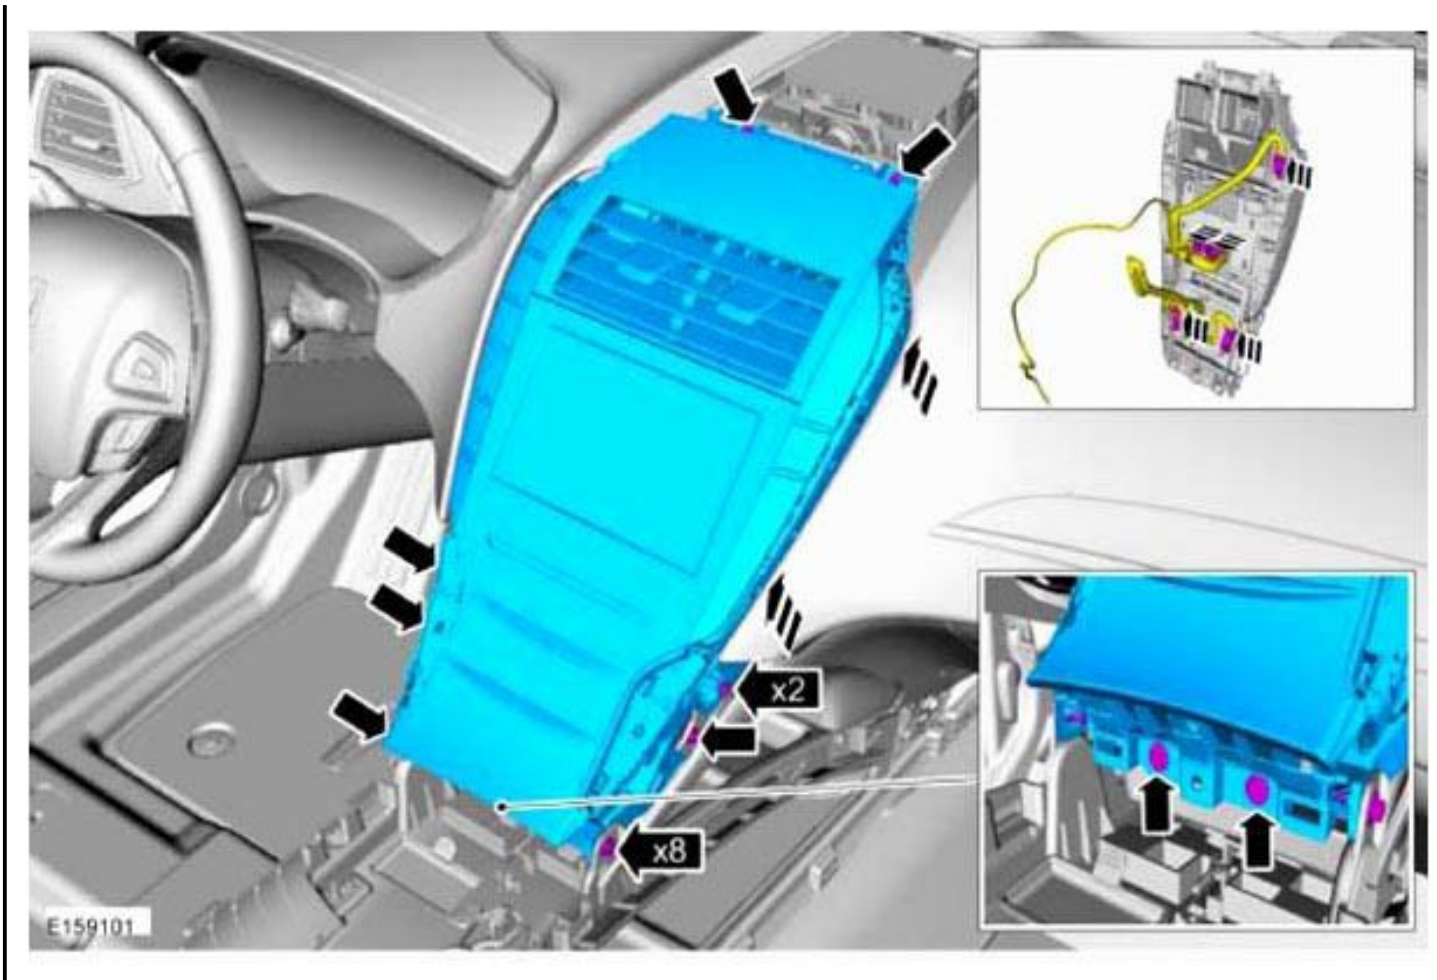

Installation

1. To install, reverse the removal procedure.